

TRI-COUNTY REGIONAL ENERGY NETWORK

SAN LUIS OBISPO • SANTA BARBARA • VENTURA

What Energy Consultants Need to Know About HERS Measures

Russ King Coded Energy, Inc.

February 19, 2025



What Energy **Consultants Need** to Know About **HERS Measures**

Instructor: Russell King, M.E.

Some images and diagrams are the property of CalCERTS, Inc.

Introduction



- FACT: It is a lot *harder* to make a house comply under the 2022 Code than the 2019 Code.
- <u>FACT</u>: This will result in <u>more HERS measures</u> being specified for compliance.
- FACT: Some of these HERS measures can no longer be "modeled away" if they fail.

Introduction



- From the energy consultant's perspective, modeling HERS measures is as simple as checking a box.
- As a responsible professional, energy consultants need make sure that the features they model can actually be installed.
- This includes being able to pass any diagnostic tests.

Introduction



- Don't "check the box" without knowing exactly what the implications are.
- Energy Consultants need to communicate the potential costs and requirements of each HERS measure they specify.
- When you specify a HERS measure, send your client the RA section for reference (aka Protocols) for the measures modeled. See Table RA2-1.
- Also know the requirements on the applicable CF2R and CF3R (and equivalent LRMF forms).

Most of the HERS Measures for 2022:

- QII
- Duct location, surface area and R-value
- VLLDCS
- LLAHU
- Return Duct design
- Air filter device design
- Bypass ducts (zoned)
- Refrigerant charge
- Fault indicator display
- HVAC System Airflow

- Fan watt draw
- EER/SEER
- Heat Pump Capacity
- Evaporatively cooled condensers
- Whole house fan
- Duct sealing
- CFV Cooling
- IAQ continuous or intermittent airflow
- Reduced infiltration



- Higher than default SPF R-values
- Pipe insulation credits
- Parallel piping
- Compact distribution
- Demand Recirculation
- Drain Water Heat Recovery Device
- Multiple Recirc loop (MF)

What you should know about . . .

Quality Insulation Installation (QII)

• It is a prescriptive measure.



- Exception: Prescriptive additions 700 SF or less.
- Instead of an extra credit for doing it, there is a big penalty for NOT doing it.
- Go to <u>www.energycodeace.com</u> and search for "Decoding QII". Download the handout from the more recent session (this year).
- Includes the "CalCERTS QII Handbook"

QII Process by Construction Phase

	Predesign I		Design	Design Review	Grading		Framing	Rough-In	Insulation	Drywall Finish	Finish	Final Inspection
	1		2	3			5	6	7	8	9	10
Energy Consultant	Specifies QII		Kickoff Meeting	Register CF1R, assign Rater in registry Sign CF1R								
А						_	ke sure tl					
Builder/ Architect			Kickoff Meeting			information happens					Provide all documents	
В	Rater											to occupant
HERS Rater C			Kickoff Meeting Explain QII	Work out sampling details	Coordinate with trades off site		Coordinate with trades on site	ENV-21 inspections	ENV-22 inspections	ENV-23 inspections	Finish CF3Rs in registry	
Insulation Installer D			Kickoff Meeting	(if any)	Acknowledges QII requirements		Understands QII requirements	Pre- insulate ENV-21	Install batt and other insulation ENV-22	Loose fill ceiling insulation ENV-23	Finish CF2Rs	
Framer E			Kickoff Meeting				Frame continuous air barrier					
Drywall Installer F			Kickoff Meeting							install and seal drywall		
Misc Trades G			Kickoff Meeting				Hard covers and draft stops	Caulk and seal ENV-21		Caulk and seal		
	1		2	3	4		5	6	7	8	9	10

TS, Inc.

QII Process by Construction Phase

	Predesign	Design	Design Review	Grading	Framing	Rough-In	Insulation	Drywall	Finish	Final Inspection
	1	2	3	4	5	6	7	8	9	10
Energy Consultant A	Specifies QII	Kickoff Meeting	Register CF1R, assign Rater in registry		[Or else				Oh, Crap! We failed QII. Fix it NOW!
Builder/ Architect B	Approves, selects Rater	Kickoff Meeting	Sign CF1R							Provide all documents to occupant
HERS Rater C		Kickoff Meeting Explain QII	Work out sampling details (if any)	Coordinate with trades off site	Coordinate with trades on site	ENV-21 inspections	ENV-22 inspections	ENV-23 inspections	Finish CF3Rs in registry	
Insulation Installer D		Kickoff Meeting		Acknowledges QII requirements	Understands QII requirements	Pre- insulate ENV-21	Install batt and other insulation ENV-22	Loose fill ceiling insulation ENV-23	Finish CF2Rs	
Framer E		Kickoff Meeting			Frame continuous air barrier					
Drywall Installer F		Kickoff Meeting						install and seal drywall		
Misc Trades G		Kickoff Meeting			Hard covers and draft stops	Caulk and seal ENV-21		Caulk and seal		
	1	2	3	4	5	6	7	8	9	10

QII – Builder Tips for New Projects

If the project needs QII (shown on CF1R-PRF-01):

- Evaluate plans very carefully. Look for unclear parts of thermal boundary. (knee walls, hard covers, bump outs, fire places, etc.)
- Decide exactly where the thermal boundary will be.
- Define responsibilities for trades. (air barriers, blocking, attic vents, sealing around fans, electrical boxes, etc.)
- Contact HERS Rater early.
 - Ask for checklists, other informational materials.
 - Meet at project early. Walk through together.
 - Learn to use HERS provider's registry.

Quality Insulation Installation (QII) Handbook



For Installers and HERS Raters



- Basically a condensed version of RA3.5 with pictures and diagrams.
- If in doubt, RA3.5 takes precedence.
- Downloadable PDF from
 CalCERTS website.

Draft Stops

À material, device or construction installed to prevent the movement of air within open spaces of concealed areas of building components, such as crawl spaces, floor/ceiling assemblies, wall assemblies, rooffceiling assemblies and artics. Note: Draft stops are important components of the air barrier and shall be artight. Fur blocks constructed of porous insulation materials cannot serve as dard stops since they are not airtight.




This photo shows a draft stop cut from OSB to fit around two ducts going up through a large square chase. This is a smoke/fire requirement in many

cases. Notice the open corners in the cut out holes where air can leak through (red arrows). These should be sealed with expansive foam or other approved material.




Draft Stops

- Make ceiling as flat and level as possible.
- Prevent insulation from falling into voids.
- Prevent airflow up from house.

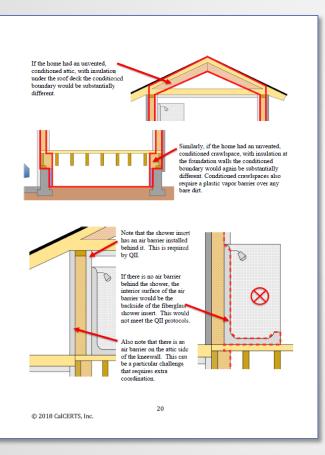

 Tub and shower inserts on an exterior wall, must have air barrier behind them.

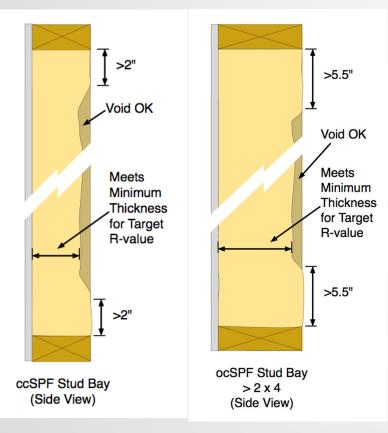


- Two kinds of spray on polyurethane foam (SPF).
- Open cell (ocSPF) and closed cell (ccSPF).
- Can be an air barrier if thick enough and voids are OK.

General Requirements for Walls, Roof/Ceilings and Floors (see RA3.5.X.1.1)

Walls, Roof/Ceilings and Floors: All Materials

- Materials shall comply with, and be installed in conformance with, all applicable building codes for building.
- Materials shall meet California Quality Standards for Insulating Material, Title 24, Part 12, Chapter 4, Article 3, listed in the California Department of Consumer Affairs Consumer Guide and Directory of Certified Insulating Materials.
- Materials shall comply with flame spread rating and smoke density requirements of Chapter 26
 and Section 720 of the Title 24, Part 2: all installations with exposed facings must use fire
 retardant facings which have been tested and certified not to exceed a flame spread of 25 and a
 smoke development rating of 450. Invulation facings that do not touch a ceiling, wall, or floor
 surface, and faced batts on the undersides of roofs with an air space between the ceiling and
 facing are considered exposed applications.
- Materials shall be installed according to manufacturer specifications and instructions.
 Hard covers or draft stops shall be placed over all drop ceiling areas and interior wall cavities to
- keep insulation in placement stop air movement. If hard covers or oreal stops are missing or incomplete mey shall be completed before insulation is installed. (See example 2. Definitions

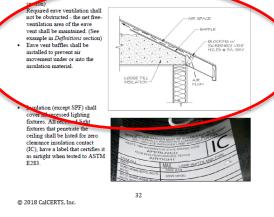

Attic venting


• Baffling insulation away from eave vents.

 The exposed attic side of insulation shall be completely covered with rigid board insulation or an air barrier. The house side of the insulation shall be in contact with the drywall or Skylight other wall finish. The insulation Vented Attic shall be supported so that it will not Air Barrie fall down by either Boot Deck Skylight Well friction fitting to the framing, inset or face stapling of flanges, or using Insulate Walls other support such (All Sides) as netting Ceiling Insulatio Interior Insulation for all Drywal kneewall and skylight shafts shall be completely enclosed by vertical and horizontal framing, including horizontal plates at top and bottom of the insulation. In unvented (conditioned) attics, where insulation is applied directly to Skylight the underside of the roof deck. kneewalls skylight shafts Unvented Attic Roof Deck and gable ends Skylight Well shall be insulated to meet or exceed the wall R-value specified on the Certificate of Compliance, and Draws all other required compliance documentation (only where they separate conditioned and unconditioned space). 41 © 2018 CalCERTS, Inc.


- Knee walls and skylight shafts.
- Must have air barrier on both sides.
- Same R-value as other walls (or modeled separately)
- Same framing as other walls? If not, check CF1R.



- All window and door headers shall be insulated to a minimum of R-3 between the exterior face
 of the header and inside surface of the finish wall material.
- Insulation must be installed on the interior side of the header to facilitate verification
- If exterior rigid sheathing is installed on the entire wall, headers do not need to be inslated.

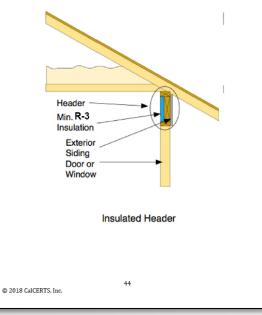

- Window and Door Headers
- Must be insulated
 - Min R-3 for 2x4
 - Min R-5 for 2x6 or larger
- If rigid exterior siding is used, insulated headers not required
- Must be on interior side for inspection (must be inspectable)

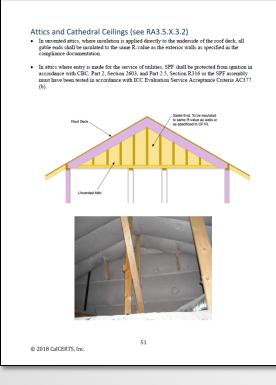

- Unvented attics
- Not *exactly* "conditioned space".
- Different than "high performance attics" which have insulation at roof deck and ceiling, and are vented.

- At very end of Handbook:
- Check Lists
 - ENV-21
 - ENV-22
- Helpful document for installers: "How to Read the Insulation Requirements on a CF1R-PRF-01"



HERS Measure: SPF Non-standard R-value

- A subset of QII, but if QII is not already triggered will trigger a single special verification by HERS rater (currently no form for this)
- Reference: RA3.5.6
 - Requires manufacturer's specs to support R-value modeled.



HERS Measure:

Duct location Surface Area and R-value

Other names: Buried ducts, etc. (anything with verified duct design) Reference: RA3.1.4.1.4

- Requires very careful and precise HVAC layout – <u>prior to modeling</u>.
- Precise data from layout is needed to properly model.



HERS Measure:

Duct location Surface Area and R-value

- <u>Reduced Duct Surface Area</u> is only a credit if the installed duct surface area is less than a default number.
- What is that default number?
 - See ACM 2.4.6.4 for returns and 2.4.6.5 for supplies
- How do you know how much is going to be installed?
- Surface area is:

duct length x duct diameter x π



HERS Measure: Verification of Low Leakage Ducts in Conditioned Space

Other names: VLLDCS Reference: RA3.1.4.3.8

 Triggers a leakage to outside test: House is pressurized to 25 Pa with blower door while ducts are pressurized to 25 Pa with duct tester.



HERS Measure: Verification of Low Leakage Ducts in Conditioned Space

- Target leakage is only 25 cfm, regardless of tonnage.
- Recommend a pre-test before any ducts get covered in sheetrock.
- Can be difficult to use a blower door on large custom homes.



HERS Measure:

Low Leakage Air Handler Unit (LLAHU)

Reference: RA3.1.4.3.9

- Unlocks the minimum duct leakage target. (Less than 5% can be specified)
- Don't specify a target too low.
- Can always re-run calcs to match actual measured targets.
- Equipment must be certified/listed on CEC website as LLAHU.



HERS Measure: Return Duct Design

Table 150.0-B & -C, *Reference:* RA3.1.4.4

- Exempts system from airflow and fan watt draw testing.
- Requires REALLY BIG DUCTS!
- They will need lots of ROOM, hard elbows, must follow tables, etc.



HERS Measure: Refrigerant Charge

<u>AKAs:</u> RCV, Improved Refrigerant Charge <u>Reference:</u> RA3.3 and RA3.2

- A prescriptive measure in CZs 2, 8-15.
- An extra credit in other CZs.
- No major change for RCV in 2019
- "Mini splits" require weigh in observation
- Can be difficult to do in the colder months.



HERS Measure: Airflow and Fan Watt Draw

Reference: RA3.3

- Ensures proper duct design.
- Target airflow is 350 cfm/ton.
- Think of this as a "D-" grade.
- 400+ is much better efficiency and comfort.
- In some cases you can model less than 350 cfm/ton.



HERS Measure: Airflow and Fan Watt Draw

- Special targets for "Small Duct High Velocity" systems (e.g., Unico)
 250 CFM/ton and 0.62 Watts/CFM
- 2019: Furnace fan watt target dropped from 0.58 to 0.45 W/CFM for gas furnace air-handling units.
 - Non-gas AHUs are still at 0.58 W/CFM



HERS Measure: Verified SEER/EER

Reference: RA3.4.3 and RA3.4.4.1

- Installed equipment must have AHRI matched components.
- AHRI rated SEER/EER must meet or exceed what was modeled.
- Triggers when over 14 SEER/11.7 EER



HERS Measure: Heat Pump Heating Capacity

Reference: RA3.4.4.2 New 2019 HERS measure

- Undersized heat pumps will run on electric resistance strips more.
- Compliance software determines minimum size. Value appears on CF1R.
- Installed capacity must meet or exceed.



HERS Measure: Whole House Fans

Reference: RA3.9 New 2019 HERS measure

- A prescriptive measure in some CZs.
- Can be installed without being modeled not tested.
- If modeled for credit, must meet a certain sizing criteria and HERS verification.



HERS Measure: Whole House Fans

- Installed unit airflow will be tested.
- Make sure it is installed somewhere that can be tested: Flat ceiling with no obstructions.
- Note requirements for attic ventilation
 1.5 CFM/SF of CFA and 1 SF attic ventilation for each 750 cfm of rated fan airflow
- Higher airflow systems may be harder to test.



HERS Measure: Central Fan Ventilation Cooling Systems (CFVCS) *Reference:* RA3.3.4

New 2019 HERS measure

- Do not confuse with CFI ventilation (IAQ)
- Similar to a residential economizer.
- Similar to a whole house fan, but uses air handler to flush house with cool outside air (before it gets hot outside).



HERS Measure: Central Fan Ventilation Cooling

- Total ventilation airflow will be tested along with total heat and cool system airflow (high speed and ventilation speed)
- Requires special equipment (dampers and controls).
- Requires very careful and precise mechanical design.



HERS Measure: Duct Sealing

Reference: RA3.1.4.3

- Should be familiar with this measure by now.
- Ducts in conditioned space are more common in current code – still must be tested for leakage.
- Recommend testing at rough if many ducts are to be inaccessible after sheetrock.



HERS Measure: Mechanical Ventilation (IAQ)

Reference: RA3.7.4.1 (continuous), RA3.7.4.2 (intermittent)

- Intermittent:
 - is much harder to verify.
 - requires special equipment (dampers) and controls



HERS Measure: Mechanical Ventilation (IAQ)

- 2022 calculations for IAQ airflow are more complicated.
- If modeled with envelope leakage less than 2 ACH50, blower door testing is triggered.
- Be careful when specifying IAQ fan watts.



HERS Measure:

Multi Family Mechanical Ventilation (IAQ)

New 2022 HERS Requirements

- If not balanced, dwelling unit enclosure *must be blower door tested* to be "tight".
- "Tight" is defined as a target leakage per square foot of dwelling unit surface area. Must be calculated for each dwelling unit!
- Testing is probably more expensive than installing a balanced system.

MF Dwelling Unit Enclosure Sealing

From CF3R-ENV-20:

When multifamily attached dwelling units must comply with the maximum dwelling unit enclosure air leakage specified in Standards Section 150.0(o)1Eii, the test shall be conducted with the dwelling unit as if it were exposed to the outdoor air on all sides, top and bottom by opening doors and windows of adjacent dwelling units as specified by RA3.8.3.1.



MF Dwelling Unit Enclosure Sealing

Bottom Line:

- If they install balanced IAQ ventilation:
 - No blower door test required
 - Balanced ventilation will be confirmed as part of the IAQ verification
- If they install exhaust only (or supply only) IAQ ventilation:
 - Must determine target CFM50 (enclosure surface area x 0.3)
 - Measured CFM50 must be less than or equal to target.
 - Test IAQ ventilation airflow as usual.
 - Some MF construction can be very hard to seal (e.g., metal framing)



HERS Measure: Reduced Infiltration (Blower Door)

Reference: RA3.8

- ECs should be pretty familiar with this by now.
- Lower numbers will be easier with QII
- Just don't model too low of a number.
- Protocols reference RESNET protocols.



HERS Measure: Pipe Insulation

Reference: RA3.6.3 (PIC-H)

- Must be verified prior to covering up with sheet rock or insulation.
- Can only be taken with trunk and branch hot water distribution systems.



HERS Measure: Parallel Piping

Reference: RA3.6.4

- Must be verified prior to covering up with sheet rock or insulation.
- Requires very careful and precise plumbing layout and design.
- Dictated by architectural layout



HERS Measure: Compact Distribution

Reference: RA3.6.5

- Must be verified prior to covering up with sheet rock or insulation.
- Requires very careful and precise plumbing layout and design.
- Dictated by architectural layout



HERS Measure: Demand Recirculation

Reference: RA3.6.6

- Requires additional pipe insulation.
- Must be verified prior to covering up with sheet rock or insulation.
- Requires special equipment and controls.



HERS Measure:

Drain Water Heat Recovery Device

Reference: RA3.6.9

Requires special equipment (certified and listed)

- Different installation methods (horizontal or vertical)
- Must be verified prior to covering up with sheet rock or insulation.
- Recovers heat from a shower and transfers it back to the shower/s or water heater.

That's All!



Questions about Title 24?

3C-REN offers a free Code Coach Service



Online: **3c-ren.org/code** Call: **805.781.1201**

Energy Code Coaches are local experts who can help answer your Title 24 Part 6 or Part 11 questions.

They can provide code citations and offer advice for your res or non-res projects.

Closing

Continuing Education Units Available

Contact nnewman@countyofsb.org for AIA HSW & ICC LUs

Coming to Your Inbox Soon!

Slides, Recording, & Survey – Please Take It and Help Us Out!

Upcoming Courses:

- High Performance Buidlings: Designing for Utility Costs & Carbon Emissions (2/20)
- Crafting High Performance Enclosures: Roofs, Walls, & Floors (3/4)
- 3C-REN Contractor Connection Hub at Beacon Building Products (3/5)
- Nonresidential: Energy Code Implementation Series, w/2025 Code Updates (3/12)

Any phone numbers who joined? Please share your name!



Thank you!

More info: **3c-ren.org** Questions: **info@3c-ren.org** Email updates: **3c-ren.org/newsletter**



TRI-COUNTY REGIONAL ENERGY NETWORK SAN LUIS OBISPO · SANTA BARBARA · VENTURA



Table RA2-1 – Summary of Measures Requiring Field Verification and Diagnostic Testing

Measure Title	Description	Procedure(s)
	Duct Measures	
Duct Sealing	Component Packages require that space conditioning ducts be sealed. If sealed and tested ducts are claimed for compliance, field verification and diagnostic testing is required to verify that approved duct system materials are utilized, and that duct leakage meets the specified criteria.	RA3.1.4.3
Duct Location, Surface Area and R-value	Compliance credit can be taken for improved duct location, surface area and R-value. Field verification is required to verify that the duct system was installed according to the design, including location, size and length of ducts, duct insulation R-value and installation of buried ducts. ¹ For buried ducts measures, Duct Sealing and High Quality Insulation Installation (QII) is required.	RA3.1.4.1
Verification of low leakage ducts located entirely in conditioned space	Duct system location shall be verified by visual inspection and diagnostic testing. Compliance credit can be taken for verified duct systems with low air leakage to the outside when measured in accordance with Reference Residential Appendix Section RA3.1.4.3.8. Field Verification for ducts in conditioned space is required. Duct sealing is required.	RA3.1.4.3.8
Low Leakage Air-handling Units	Compliance credit can be taken for installation of a factory sealed air handling unit tested by the manufacturer and certified to the Commission to have met the requirements for a Low Leakage Air-Handling Unit. Field verification of the air handler's model number is required. Duct Sealing is required.	RA3.1.4.3.9
Verification of Return Duct Design	Verification to confirm that the return duct design conform to the <u>applicable</u> criteria given in TABLE 150.0-B <u>. or TABLE 150.0-C. TABLE 160.3-A</u> , or TABLE 160.3-B.	RA3.1.4.4
Verification of Air Filter Device Design	Verification to confirm that the air filter devices conform to the requirements given in <u>applicable</u> Standards Sections 150.0(m)12 or 160.2(b)1.	RA3.1.4.5
Verification of Prescriptive Bypass Duct- Requirements	Verification to confirm zonally controlled systems comply with the bypass duct requirements in Section 150.1(c)13 <u>or 170.2(c)3C</u> .	RA3.1.4.6
	Air Conditioning Measures	
Improved Refrigerant Charge	Component Packages require in some climate zones that air-cooled air conditioners and air-source heat pumps be diagnostically tested in the field to verify that the system has the correct refrigerant charge. For the performance method, the Proposed Design is modeled with less efficiency if diagnostic testing and field verification is not performed. The system must also meet the prerequisite minimum System Airflow requirement.	RA3.3 RA3.2 RA1.2
Installation of Fault Indicator Display	Component Packages specify that a Fault Indicator Display can be installed as an alternative to refrigerant charge testing. The existence of a Fault Indicator Display has the same calculated benefit as refrigerant charge testing. Field verification is required.	RA3.4.2
Verified System Airflow	When compliance requires verified system airflow greater than or equal to a specified criterion, field verification and diagnostic testing is required.	RA3.3
Air-handling Unit Fan Efficacy	When compliance requires verified fan efficacy (Watt/cfm) less than or equal to a specified criterion, field verification and diagnostic testing is required.	RA3.3
Verified Energy Efficiency Ratio (EER <u>/EER2</u>)	Compliance credit can be taken for increased EER/ <u>EER2</u> by installation of specific air conditioner or heat pump models. Field verification is required. ²	RA3.4.3 RA3.4.4.1
Verified Seasonal Energy Efficiency Ratio (SEER <u>/SEER2</u>)	HERS Rater field verification of the SEER <u>/SEER2</u> rating is required for some systems.	RA3.4.3 RA3.4.4.1
Rated Heat Pump Capacity Verification	When performance compliance uses a heat pump, the rated capacity of the installed system shall be verified to be greater than or equal to the specified value.	RA3.4.4.2
Evaporatively Cooled Condensers	Compliance credit can be taken for installation of evaporatively cooled condensers. Field verification of duct leakage is required. Field verification of refrigerant charge is required. Field verification of EER <u>/EER2</u> is required.	RA3.1.4.3, RA3.2 RA3.4.3. RA3.4.4.1
Variable Capacity Heat Pump (VCHP) Compliance Option	When performance compliance uses the VCHP compliance option, the system shall be field verified to confirm it meets the eligibility requirements.	<u>RA3.4.4.3</u>

2022 Residential Appendices

2022 Residentia	Аррениесь	RAZ-J
	Ventilation Cooling Measures	
Whole House Fan	When performance compliance uses a whole house fan, the installed whole house fan airflow rate (cfm) and fan efficacy (W/cfm) shall be verified to be equal to or better than the specified values.	RA3.9
Central Fan Ventilation Cooling System	When performance compliance uses a central fan ventilation cooling system (CFVCS), the installed CFVCS ventilation airflow rate (cfm) and fan efficacy (W/cfm) shall be verified to be equal to or better than the specified values.	RA3.3.4
	Mechanical Ventilation Measures for Improved Indoor Air Quality	
Continuous Whole- Building Mechanical Ventilation Airflow	Measurement of whole-building mechanical ventilation is mandatory for newly constructed buildings.	RA3.7.4.1
Intermittent Whole- Building Mechanical Ventilation Airflow	Measurement of whole-building mechanical ventilation is mandatory for newly constructed buildings.	RA3.7.4.2
Kitchen Local Mechanical Exhaust Verification	Verification of kitchen local mechanical exhaust is mandatory for newly constructed buildings.	<u>RA3.7.4.3</u>
<u>Heat Recovery</u> Ventilation (HRV) or Energy Recovery Ventilation (ERV) Rated Performance Verification	When performance compliance requires verification of the HRV/ERV fan efficacy (W/cfm) or heat recovery efficiency, then the installed ventilation system shall be verified.	<u>RA3.7.4.4</u>
	Building Envelope Measures	
Building Envelope Air Leakage	Compliance credit can be taken for reduced building envelope air leakage. Field verification and diagnostic testing is required. <u>Multifamily dwelling units are required to have enclosure leakage verified when supply or exhaust ventilation systems are installed.</u>	RA3.8
Quality Insulation Installation (QII)	Compliance Software recognizes standard and improved envelope construction. Quality Insulation Installation is a prescriptive measure in all climate zones for newly constructed buildings and additions greater than 700 square feet, except low-rise multifamily buildings in Climate Zone 7. Field verification is required.	RA3.5
Quality Insulation Installation for Spray Polyurethane Foam (SPF) Insulation	A HERS Rater shall verify the installation of SPF insulation whenever R-values other than the default R-value per inch are used for compliance.	RA3.5.6
	Single Family Domestic Hot Water Measures	
Verified Pipe Insulation Credit (PIC-H)	Inspection to verify that all hot water piping in non-recirculating systems is insulated and that corners and tees are fully insulated. No piping should be visible due to insulation voids with the exception of the last segment of piping that penetrate walls and delivers hot water to the sink, appliance, etc.	RA3.6.3.
Verified Parallel Piping (PP-H)	Inspection that requires that the measured length of piping between the water heater and single central manifold does not exceed five feet	RA3.6.4
Verified Compact Hot Water Distribution System Expanded Credit (CHWDS-H-EX)	Field verification to insure that the eligibility criteria specified in RA 3.6.5 are met.	RA3.6.5
Demand Recirculation: Manual Control (RDRmc-H)	Inspection to verify that all recirculating hot water piping is insulated and that corners and tees are fully insulated. No piping should be visible due to insulation voids	RA3.6.6
Demand Recirculation: Sensor Control(RDRsc- H)	Inspection to verify that all recirculating hot water piping is insulated and that corners and tees are fully insulated. No piping should be visible due to insulation voids.	RA3.6.7
Verified Drain Water Heat Recovery System	Inspection to verify that the DWHR unit(s) and installation configuration match the compliance document and the DWHR(s) is certified to the Commission to have met the	RA3.6,9

	Multi Family Domestic Hot Water Heating Measures	
Multiple Recirculation Loop Design for DHW Systems Serving Multiple Dwelling Units	Inspection that a central DHW system serving a building with more than eight dwelling units has at least two recirculation loops, each serving roughly the same number of dwelling units. These recirculation loops may the same water heating equipment or be connected to independent water heating equipment.	RA3.6.8
Verified Drain Water Heat Recovery System (DWHR-H)	Inspection to verify that the DWHR unit(s) and installation configuration match the compliance document and the DWHR(s) is certified to the Commission to have met the requirements.	RA3.6.9

1. Note: Compliance credit for increased duct insulation R-value (not buried ducts) may be taken without field verification if the R-value is the same throughout the building, and for ducts located in crawlspaces and garages where all registers are either in the floor or within 2 feet of the floor. These two credits may be taken subject only to enforcement agency inspection.

2. Note: The requirement for verification of a high EER/EER2 does not apply to equipment rated only with an EER/EER2.